


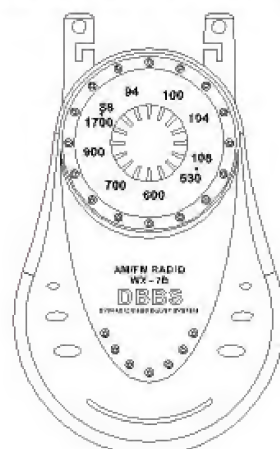

**MODEL VX870
AM/FM RADIO WITH MINITYPE TORCH**



BATTERY OPERATION

1. Apply thumb pressure to battery cover and slide it down.
 2. Use 2 "AAA" size batteries (UM-4) only, insert batteries with correct polarity.
 3. Close battery cover.
- **Remove the batteries when they are exhausted or when the unit is not going to be used for a long time.

RADIO OPERATION

1. Rotate Volume Knob clockwise to turn radio on to a desired sound level.
2. Slide Band Switch to desired band.
3. Rotate the Tuning knob to desired station.
4. For FM reception please extend the earphone as this acts as the FM antenna.
5. Rotate the unit direction for maximum reception of AM band.
6. Replace old batteries or remove the batteries when the unit is not going to be used for a long time.
7. Press and hold the flash light button to turn on light.

MAINTENANCE

1. Do not expose the unit to rain, moisture, or extreme temperature.
2. Do not place the unit near strong magnets.
3. Do not use benzene thinner or any abrasive powder to clean the cabinet, wipe it with a soft cloth moistened with a mild soap and water solution.

FCC STATEMENT

This device complies with part 15 of the FCC rules. Operation is subject to the condition that this device does not cause harmful interference.

TECHNICAL SPECIFICATION

Frequency Range: FM 88-108 MHz
 AM 530-1700 KHz
IF Frequency : FM 10.7 MHz
 AM 455 KHz
Power Source : DC 3V(2"AAA" BATTERIES (not included))

" FOR ADDITIONAL SET UP OR OPERATING ASSISTANCE, PLEASE CONTACT CUSTOMER SERVICE AT (954) 660-7100. PLEASE KEEP ALL PACKAGING MATERIAL FOR AT LEAST 90 DAYS IN CASE YOU NEED TO RETURN THIS PRODUCT TO PLACE OF PURCHASE. FOR PARTS AND ACCESSORIES, CONTACT FOX INTERNATIONAL AT 1-800-321-6993"